

# PRO CF-833 , PRO CF-834 PRO CF-733 , PRO CF-734

### **Operating Instructions**

Thank you very much for choosing SLIK Carbon Series Tripod. The SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of

Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of your Tripod's many

Retain this operating instruction in case you might want to refer back to it.

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

### 

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

S120


Leg

Weight hook

Leg lock nut


exchangeable

Leg tips

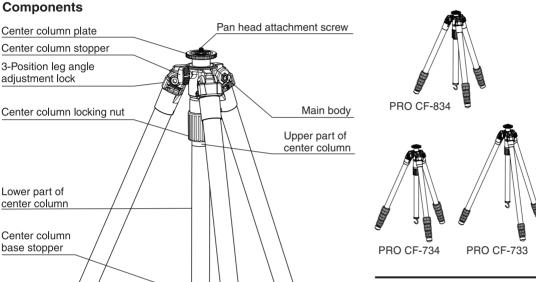

### **Optional accessory**

 SPIKE SET Cat. NO.618-411



### **Specification**

Weight

Weight

PRO CF-733 Folded length

PRO CF-734 Folded length

Max. operating height

Max. center column ext.

PRO CF-833 Folded length 600mm(23.7 in) Max. operating height Max. center column ext. Weight

1,710mm(67.3 in) 325mm(12.7 in) 1,550g(3.42 lbs)

PRO CF-834 Folded length 480mm(18.9 in) Max. operating height 1,650mm(64.9 in) Max. center column ext. 325mm(12.7 in) 1,560g(3.44 lbs)

> 575mm(22,7 in) 1,675mm(65.9 in) 355mm(13.9 in) 1,330g(2.94 lbs)

475mm(18.8 in) Max. operating height 1,650mm(64.9 in) 325mm(12.7 in) Max. center column ext. 1,350g(2.98 lbs)

With exclusive case

### Equipment that can be loaded on this tripod

Maximum loading capacity:

PRO CF-833 :7kg

PRO CF-834 :7kg

PRO CF-733 :5kg

PRO CF-734 :5kg

Do not exceed the specified loading capacity.


### Pan head mounting post

### Prohibition



Do not attach a camera directly to the pan head attachment screw. This may damage both your camera and tripod.

### Carrying the tripod O Prohibition

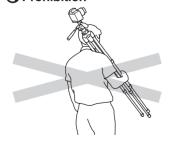

The hanging weight shall be a part of the maximum loading capacity.

Carrying a tripod with a camera left on can result in unexpected accidents. We, therefore, recommend you to remove your camera while carrying the tripod.

### In case of the shock given to tripod by force

PRO CF-833


Caution

When the shock has been given to the tripods and legs such as falling down, please check well whether there are cracks, flaws, etc. on the

When you find some cracks, flaws, etc. on the pipes, stop to use it and ask to repair. It may be wounded when some of fibers came out from the pipes. In that case do not touch it.

### Clamp head



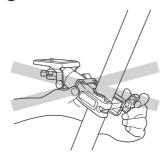


Please do not use an optional clamp head for a carbon fiber tripod. The pipe may be damaged.

### Setting up



To prevent accidental equipment fall or tripod tipping over, making sure all levers, knobs and handles on the tripod are securely tightened. And all of the three legs are opened all the way.

### **Head setting**

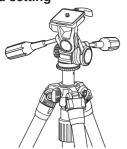

Set the new head or accessory on the pan head attachment screw. And turn the head clockwise until it comes to stop.

Tighten the panning lock knob and turn clockwise slightly.

# **Extending the tripod legs**




When you extend the legs, please proceed from the upper section. When you fold the legs, please proceed from the lower section. It will be steady to grip the upper part of pipe just above the lock nut.

## **○** Prohibition




Do not remove the nut and take out pieces. If it has been removed, insert the pieces as per the above specification.

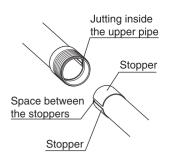

Match the space between the stoppers and jutting inside the upper pipe when the pipe is connecting.

### Three position adjustable legs

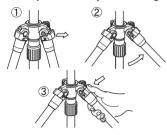

To change the angle of each leg, close the leg slightly, and then pull the leg angle adjustment lock out. There is a choice of two other angle positions. After choosing the desired leg angle, securely push in the adjustment lock.

### Operating the center column



A - Screw-type Center column stopper is used to lock or unlock center column. B - Twist-type

Center column locking nut is used to adjust a tension of the movement. The both of A and B must be locked for fixing center column.

### Inverting the center column

### Caution




- ①Remove the pan head.
- 2Remove the center column base stopper turning to the direction of arrow
- 3 Loosen the center column stopper and the center column locking nut, and then pull out the center column.




Insert the center column from the lower side of main body, and tighten the center column locking nut and the center column stopper. Make sure to re-attach the center column base stopper in order to prevent the center column from falling out accidentally.

### **○** Prohibition

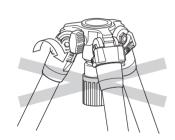

Do not turn the center column stopper while pulling out the center column. The internal parts may be damaged.

### How to get low position shots

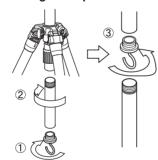

Remove the center column base stopper, and then remove the lower part of center column.

Put the center column base stopper on the upper part of center column.

### How to change the leg tips



The leg tips can be converted to the spike leg tips. (sold separately) To remove the rubber leg tip, hold the leg pipe tightly and loosen the rubber leg tip.




Screw the spike leg tip into the leg pipe by finger tips until it comes stop. Then the spike leg tip must be tightened up with the wrench (comes with SPIKE SET).


### Prohibition

If you hold the leg pipe other than the lowest part, the leg pipe may be damaged. Always use the attached wrench for the conversion. The pipe may be damaged.

### How to change the panhead attachment screw

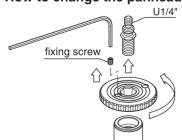

To change the U3/8" screw, loosen the fixing screw with an allen wrench (2.5mm width) and rotate the center column plate to remove from the center column. Then push out the panhead attachment screw from the bottom.

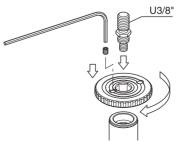

Flip the panhead attachment screw and put back to the center coumn plate. Screw in the center column plate and the panhead attachment screw. Tighten the fixing screw to avoid the rotating the center column plate while in use.

### Care of the tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

### SLIK CORPORATION

853 Kayama, Hidaka City, Saitama 350-1231 Japan Phone 81-42-989-2141, Fax. 81-42-985-0210 ©2018